


Note: This circuit is designed to use the type 200 & 201 tubes with 5 volt 1 amp filaments.

**Notes**

- 1- Connect phones to Amplifier posts +40 and OUT.
- 2- Make all battery connections to the Amplifier.

**PRELIMINARY**

The information presented is believed to be correct. However, it is subject to revision at any time.

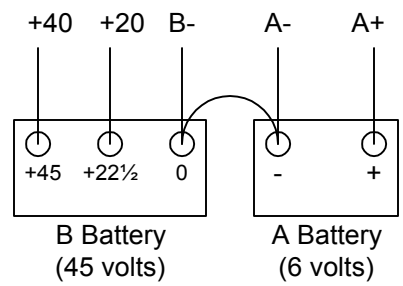

		<b>W3NLB</b>		(c) 2004 - 2013 W3NLB All Rights Reserved	
		<b>Atwater Kent Model 3 3955</b>			
<b>Schematic and Wiring Diagram</b>					
Drawn by:	Leigh Bassett W3NLB	FSCM NO	DWG NO	REV	A
Date:	14 Nov 2013	SCALE	SHEET	1 OF 1	